


- ☒ Robot body
- ☒ Accessory box
- ☒ User's manual

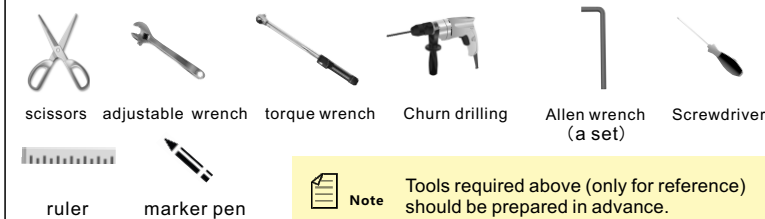

Please access to QKM website to obtain resources related to our product (user's manual, software system and training material, etc.)

Before you contact our technical representative, please provide follow information:


- Robot model No.
- Robot serial No.
- Any accurate expression of alarm infor.and description of the problem.

Tower A, Building 17, Headquarters 1, No.4 Xinzhu Road,
Songshan Lake High-tech Industrial Development Zone,
Dongguan , Guangdong, China


Tel: +86 0769-27231381
Fax: +86 0769-27231381-8053
Zip code: 523808
Email: service@qkmtech.com
Website: www.qkmtech.com



Scan QR code to follow QKM

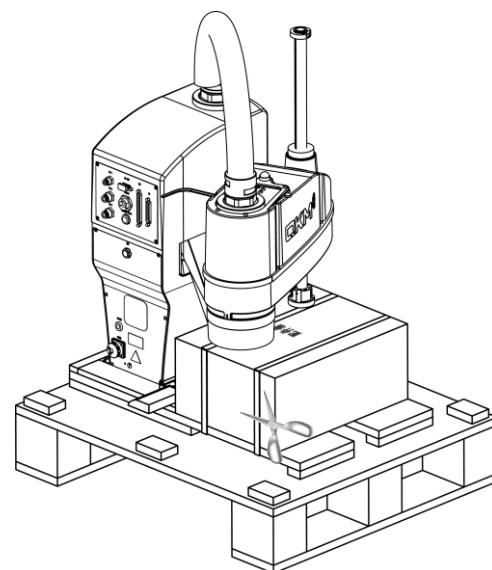

- 1、Cut off the cable tie to unload accessory box.
- 2、Take out the required items from accessory box,confirm the product components and status according to the packing list.


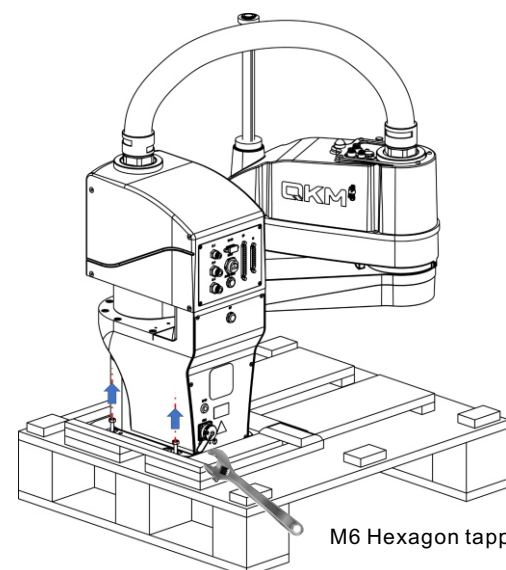


- 1、 Use a adjustable wrench to remove the fixing screw.


After the robot base screw is removed, the robot arm needs to be manually supported. Avoid tilting the robot due to its own center of gravity.





When transporting robots, at least 2 people should support them with their hands and work together. Assist in transporting the robot to the installation rack (the entire robot Weight is 29kg).

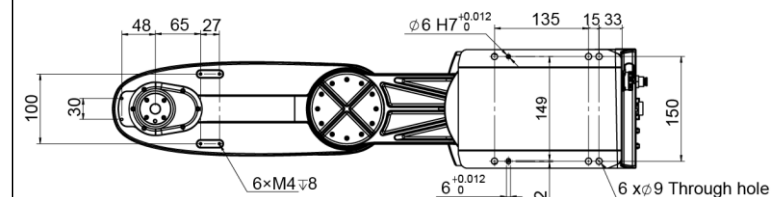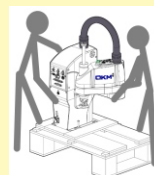

- 1、 Design and prepare mounting holes according to base dimensions.
- 2、 Mounting the base of the robot in a formal way.

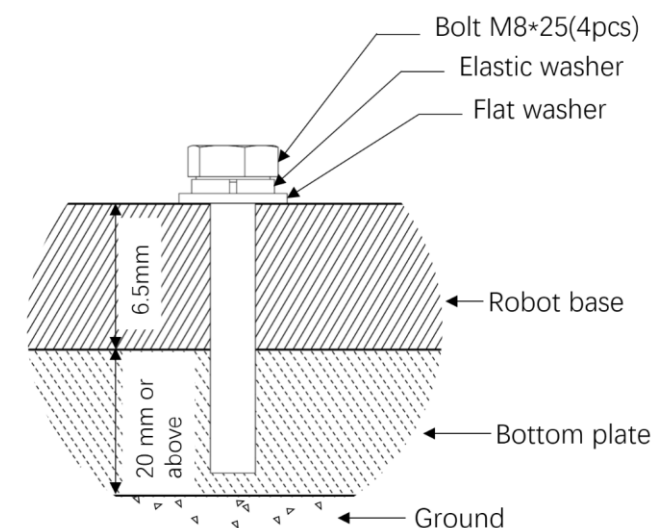

The back of the robot base should be reserved for more than 150mm space for cable installation

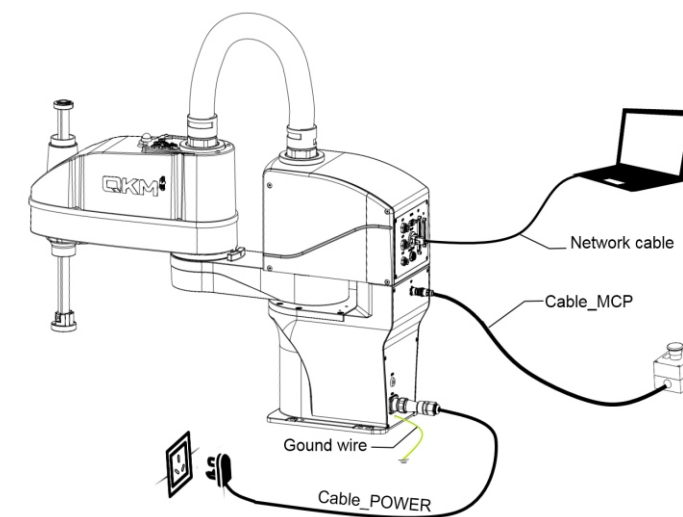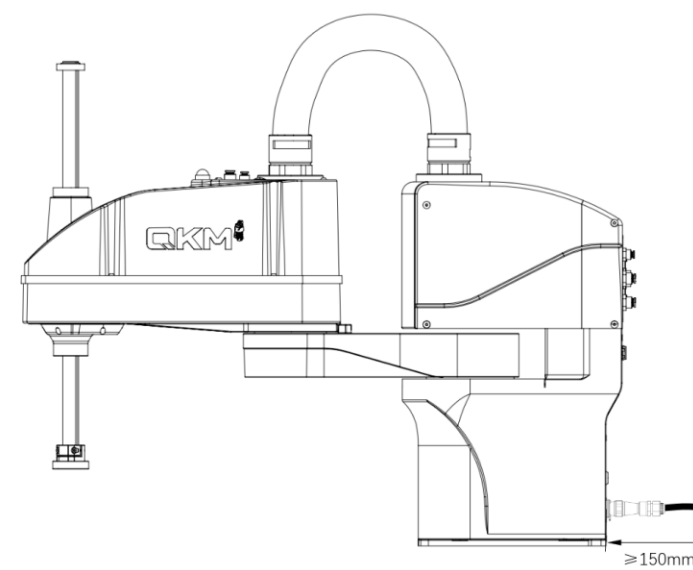

- 1、Install the network cable, ground wire, cable_MCP and cable_POWER according to the schematic diagram.



Pay attention to the safety of electricity, please do not install the cable with power.